



merit industries, inc.

TECH NOTES

<http://www.meritind.com>

Date: 06-14-02

Re: New Jersey Games and Coin Mech and Bill Acceptor Operation

New Jersey Megatouch games are designed and built to comply with rules outlined by the state of New Jersey. One of the requirements is that the machine may accept no more than fifty cents per player with a two-player limit. To follow this guideline, all New Jersey Megatouch Emerald 2 and Force 2002 Point 5 games and kits will disable the operation of the coin mech and/or bill acceptor in order to prevent excess credits.

The operation of the coin mech and/or bill acceptor is dependent upon the DIP switch settings of the game. If the DIP switch setting "use lower play price defaults" is set to yes, the bill acceptor is always disabled and the coin mech will be disabled once the game accumulates 2 credits. If "use lower play price defaults" is set to no, the bill acceptor will be disabled after one coin has been dropped and the coin mech will be disabled once the game has accumulated 4 credits. Follow the instructions below to change the DIP switch setting on your game.

1. Press the SETUP button.
2. Touch the "OPTIONS" icon on the Set-Up Screen.
3. Touch the "NEXT PAGE" icon to page through the options until you see the setting "Use Lower Play Price Defaults".
4. To change all games to \$0.50 set this option to "NO", to change games to \$0.25 set this option to "YES".

NOTE: Some games (Great Solitaire, Double Solitaire, Route 66, and Checkerz.) will remain at \$0.50 regardless of the DIP switch setting.
5. Touch the "EXIT" icon once to return to the Set-Up Screen.
6. Select the "GAME MENU" icon from the Set-Up Screen.
7. Touch either the "DEFAULT ALL" icon, to activate the new price settings and default the games that appear in each category, or the "ENABLE ALL" icon, to activate the new price setting and show all games in their appropriate category.

NOTE: If you want to customize the game menu to turn certain games on or off, you can make these changes on the Game Menu Screen now.
8. Touch the "EXIT" icon twice to exit all the way out of the options settings.