

## **ATTENTION:**

OBSERVE PRECAUTIONS FOR HANDLING ESD-SENSITIVE DEVICES

# **Removal/Installation of Major Assemblies - Ion eVo/eVo Walleto/Elite Edge/Megatouch Entertainer**

## **Hard Drive Removal**

To determine whether your hard drive is quick-click or non-quick-click, look for a light gray adapter between the hard drive adapter and the hard drive mounting bracket. See Figure 1. If there is such an adapter, then you have a quick-click hard drive; if not, then your hard drive is non-quick-click.

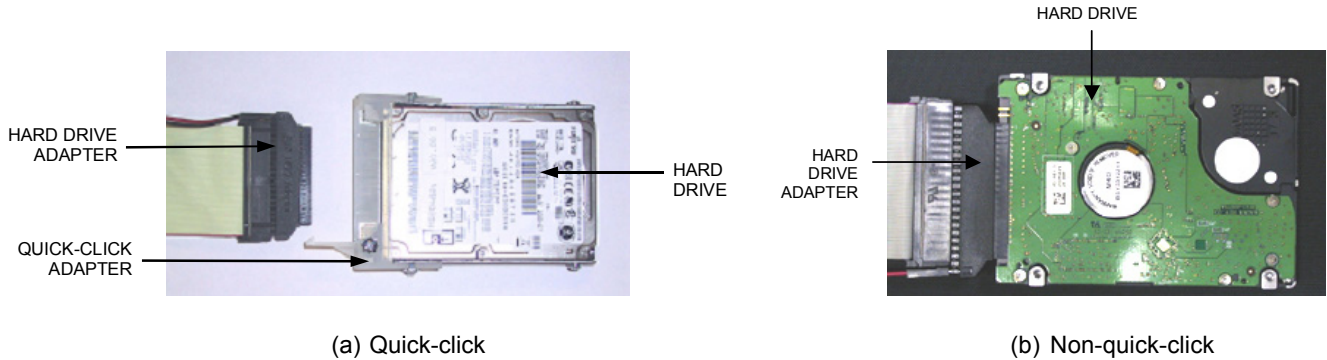


FIGURE 1 - HARD DRIVES

### **For Quick-Click Hard Drives:**

1. If you are connected to Tournamaxx or Tournachamp, you must perform an **Update From Server** before removing the hard drive so that no information is deleted.
2. Turn off and unplug the game.
3. Unlock and open the CPU section.
4. Disconnect the hard drive adapter, with the attached ribbon cable, from the hard drive (Figure 2).

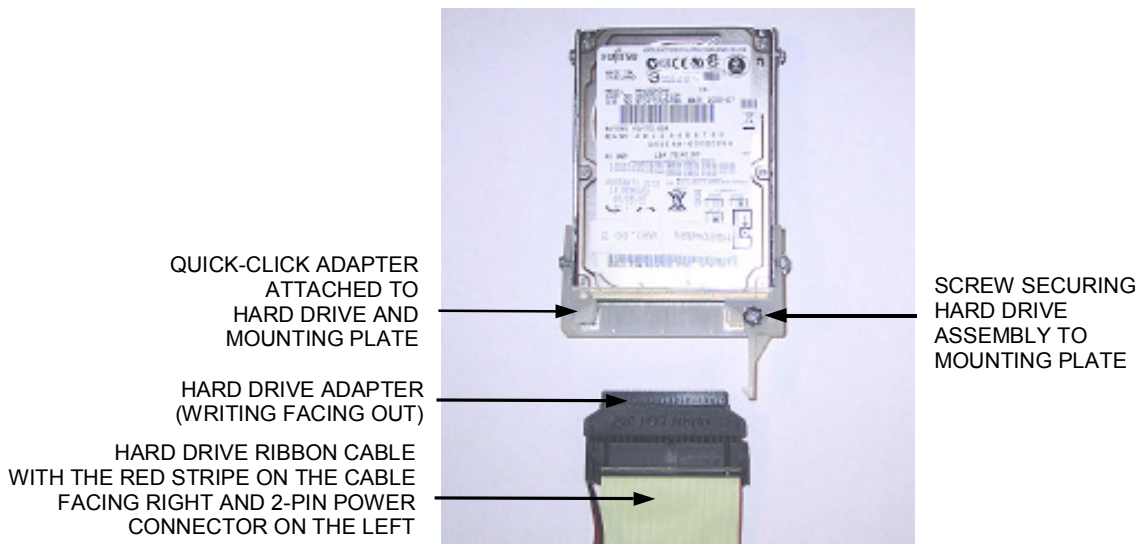


FIGURE 2 - QUICK-CLICK HARD DRIVE ASSEMBLY CONNECTION

## **Troubleshooting Information - Removal/Installation of Major Assemblies - Ion eVo/eVo Walleto/Elite Edge/Megatouch Entertainer**

## **ATTENTION:**

OBSERVE PRECAUTIONS FOR HANDLING ESD-SENSITIVE DEVICES

### **Removal/Installation of Major Assemblies - Ion eVo/eVo Walleto/Elite Edge/Megatouch Entertainer (cont'd)**

5. Remove the single screw securing the hard drive mounting bracket to the underlying mounting plate (see Figure 2). This screw will not be reused.
6. Remove the hard drive and the attached bracket from the mounting plate by sliding the assembly down and off its mounting plate.

#### **For Non-Quick-Click Hard Drives:**

1. If you are connected to Tournamaxx or Tournachamp, you must perform an **Update From Server** before removing the hard drive so that no information is deleted.
2. Turn off and unplug the game.
3. Unlock and open the CPU section.
4. Remove the 4 screws and washers securing the hard drive to the hard drive mounting plate. See Figure 3.
5. Remove the hard drive assembly and disconnect the hard drive ribbon cable from the hard drive.

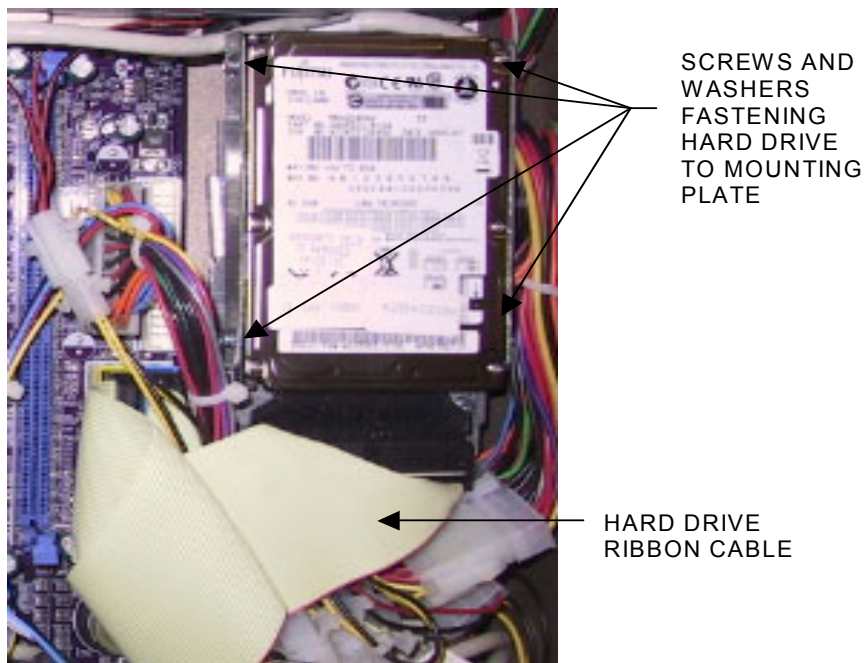


FIGURE 3 - NON-QUICK-CLICK HARD DRIVE REMOVAL

## **ATTENTION:**

OBSERVE PRECAUTIONS FOR HANDLING ESD-SENSITIVE DEVICES

# **Removal/Installation of Major Assemblies - Ion eVo/eVo Wallette/Elite Edge/Megatouch Entertainer (cont'd)**

## **Hard Drive Installation**

### For Quick-Click Hard Drives:

1. Attach the hard drive ribbon cable in the game to the supplied hard drive by lining up the left side of the hard drive adapter with the pins on the hard drive and then carefully inserting it all the way into the quick-click adapter (see Figure 2 for proper orientation).
2. Slide the new hard drive assembly onto the game's mounting plate. Align the mounting bracket with screw hole on the mounting plate, then secure the supplied screw in place (see Figure 2).
3. Close and lock the CPU section.
4. Plug in and turn on the game. The game will reboot twice to configure the hardware. When prompted, perform a touchscreen calibration.
5. If you are connected to TournaMAXX or TournaCHAMP, you must re-enter the dial-in settings after completing the software upgrade. After entering the settings, make the initial call into the server and then perform two **Updates From Server**. Refer to the MegaNet® manual for information on how to perform these functions.

### For Non-Quick-Click Hard Drives:

1. Connect the hard drive ribbon cable to the supplied hard drive according to Figure 4. Note that 4 pins on the hard drive are set off and will remain unconnected. Make certain that the red stripe on the ribbon cable (indicating pin-1 position) is inserted facing the unconnected pins.
2. Align the new hard drive in the hard drive mounting plate and secure it in place with the 4 existing screws and washers (Figure 4).

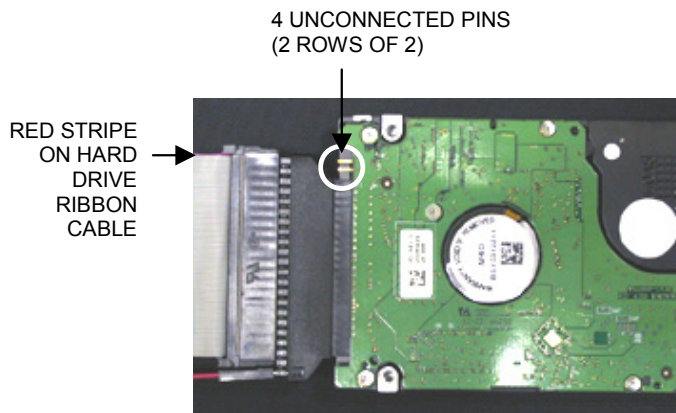


FIGURE 4 - CIRCUIT-BOARD SIDE OF HARD DRIVE

3. Close and lock the CPU section.
4. Plug in and turn on the game.